

## Re: RS6000 LED code 518

**Source:** <http://unix.derkeiler.com/Mailing-Lists/AIX-L/2004-06/0074.html>

---

**From:** Leon Kaiver (*LKaiver\_at\_COMPURES.COM*)

**Date:** 06/04/04

Date: Fri, 4 Jun 2004 11:08:51 -0500  
To: aix-l@Princeton.EDU

Probably the quickest place to look is the IBM Redbook Certification Study Guides for Installation & System Recovery and/or Problem Determination. These are pretty good at guiding you through the steps necessary to recovery from a corrupted rootvg filesystem as well as other boot problems. They can be located at:

<http://publib-b.boulder.ibm.com/Redbooks.nsf/RedbookAbstracts/sg246185.html?Open>  
and  
<http://publib-b.boulder.ibm.com/Redbooks.nsf/RedbookAbstracts/sg246183.html?Open>

Leon J. Kaiver  
Senior Technical Consultant  
Computech Resources, Inc.  
920-336-1387 ext. 244  
920-366-4884 (cell)

Vipin Khushu - SuSe <vkushu@GUERNSEYOP.COM>  
Sent by: IBM AIX Discussion List <aix-l@Princeton.EDU>  
06/04/2004 10:25 AM  
Please respond to  
IBM AIX Discussion List <aix-l@Princeton.EDU>

To  
aix-l@Princeton.EDU  
cc

Subject  
RS6000 LED code 518

Hello \*

We have a Motorola RS6000 running IBM AIX 4.3.3 that fails to boot completely.

The LED code is 518.

<http://www.pimpworks.org/ibm/aixled.html> defines this code as "Remote

AIX-L: Re: RS6000 LED code 518

Mount of the root and /usr file systems failed during network boot".

Has anyone seen this condition before and what have you done to recover from this?

TIA

Vipin-