

Re: LED Error 9114 (B0061406)

Source: <http://unix.derkeiler.com/Mailing-Lists/AIX-L/2004-07/0286.html>

From: Green, Simon (*Simon.Green_at_EU.ALTRIA.COM*)

Date: 07/29/04

Date: Thu, 29 Jul 2004 11:29:07 +0200
To: aix-l@Princeton.EDU

You can find that 8-digit code in the H80 Service Guide: just follow the MAP.

Actions/failing FRU are...

1. Update system firmware
2. Check for AIX updates
3. Primary I/O backplane Location: U0.1-P1

There's also a recommendation for firmware errors generally to do a slow boot. This may reveal more information about the problem, if the other information is insufficient.

Information on the 9114 code is in chapter four, under "Service Processor Checkpoints".

If you don't already have a copy, you can download the service guide at http://publib16.boulder.ibm.com/pseries/en_US/infocenter/base/hardware.htm You can get to here from the main pSeries support page. You should also get "Diagnostic Information for Multiple Bus Systems" whilst you're at it.

-----Original Message-----

From: terry.german@PHONES4U.CO.UK [mailto:terry.german@PHONES4U.CO.UK]
Sent: 28 July 2004 12:07
To: aix-l@Princeton.EDU
Subject: LED Error 9114 (B0061406)

Before acting on this e-mail or opening any attachments you are advised to read

The Caudwell Holdings group of companies' disclaimer at the end of this e-mail.

=====

All,

I have a RS6000 H80 that is failing to get passed 9114 on the LED panel on boot up, the server hangs for a about 5 minutes on 9114 then comings up with the error B0061406. When I go in to see what Processor Errors there are, two entries for "Service Processor Hardware Failure" and "Service Processor Firmware Failure". I have tried to get to the Firmware prompt but just get

AIX-L: Re: LED Error 9114 (B0061406)

the same error, I have even disconnected the internal CD drive and tape drive but to not joy.
I am completely confused... which isn't hard to do.