

Memory added but not all being recognized

Source: <http://unix.derkeiler.com/Mailing-Lists/AIX-L/2005-09/0100.html>

From: Mark Schlechte (*mschlechte_at_REGINA.CA*)

Date: 09/22/05

Date: Thu, 22 Sep 2005 11:52:49 -0600
To: aix-l@Princeton.EDU

I have a 44P-270 with 1GB of ram. It had 4 - 246MB DIMMS (IBM PN 4019).
I added another 2 - 256 MB DIMMS to bring it up to 4096MB.
After powering it up it now only recognizes 2048MB so I'm 2GB short.
(Boot screen shows 2048MB and lsattr -El mem0 also just shows 2048).

I've pulled out the memory card and reseated the memory DIMM's I just added.
Same result.

Am I missing anything here that will stop the server from recognizing the extra memory?

This is AIX 4.3.3 if that makes a difference.

Mark

DISCLAIMER: The information transmitted is intended only for the addressee and may contain confidential, proprietary and/or privileged material. Any unauthorized review, distribution or other use of or the taking of any action in reliance upon this information is prohibited. If you received this in error, please contact the sender and delete or destroy this message and any copies.