

freebsd-current: Re: ATAng not detecting drives

Re: ATAng not detecting drives

Source: <http://unix.derkeiler.com/Mailing-Lists/FreeBSD/current/2003-08/1852.html>

From: Soren Schmidt (*sos_at_spider.deepcore.dk*)

Date: 08/31/03

To: Jan Srzednicki <w@dream.vg>

Date: Sun, 31 Aug 2003 16:57:57 +0200 (CEST)

It seems Jan Srzednicki wrote:

```
> ad0: 19546MB <FUJITSU MPF3204AT> [39714/16/63] at ata0-master UDMA66
> ad1: 39093MB <FUJITSU MPG3409AH EF> [79428/16/63] at ata0-slave UDMA66
> ata1-slave: FAILURE - ATA_IDENTIFY status=51<READY,DSC,ERROR>
> error=4<ABORTED>
> acd0: CDROM <CD-540E> at ata1-master UDMA33
> cd0 at ata1 bus 0 target 0 lun 0
> cd0: <TEAC CD-540E 1.0A> Removable CD-ROM SCSI-0 device
> cd0: 33.000MB/s transfers
> cd0: cd present [2154583490 x 838860800 byte records]
> Mounting root from ufs:/dev/ad0s2a
>
> (it's this ata1-slave thing).
> Previously, it has been seen as:
>
> acd1: CD-RW <CD-W540E> at ata1-slave UDMA33
```

Ok, I've finally managed to get a setup that exhibits this problem, expect a fix soon...

-Søren

freebsd-current@freebsd.org mailing list

<http://lists.freebsd.org/mailman/listinfo/freebsd-current>

To unsubscribe, send any mail to "freebsd-current-unsubscribe@freebsd.org"