

freebsd-current: Re: System boots with ACPI enabled now but hangs on reboot

## Re: System boots with ACPI enabled now but hangs on reboot

**Source:** <http://unix.derkeiler.com/Mailing-Lists/FreeBSD/current/2004-06/0244.html>

---

**From:** Ronald Klop ([ronald-freebsd6\\_at\\_klop.yi.org](mailto:ronald-freebsd6_at_klop.yi.org))

**Date:** 06/03/04

Date: Thu, 03 Jun 2004 21:07:58 +0200

To: Grover Lines <[grover@ceribus.net](mailto:grover@ceribus.net)>, [freebsd-current@freebsd.org](mailto:freebsd-current@freebsd.org)

On Thu, 3 Jun 2004 11:57:28 -0700, Grover Lines <[grover@ceribus.net](mailto:grover@ceribus.net)> wrote:

> *I've been building world on a daily basis and starting May 16 my kernel*  
> *was*  
> *hanging with ACPI enabled. Anyway since a couple days ago the system*  
> *boots*  
> *fine but hangs on reboot. My system is a K7S5A and here's my debugging*  
> *info*  
> *so that maybe it will help someone to fix the issue.*

>

> *boot -v with ACPI enabled* <http://www.ceribus.net/freebsd/dmesg.txt>

> *boot -v with ACPI disabled* <http://www.ceribus.net/freebsd/dmesg-wo.txt>

>

> *ASL* <http://www.ceribus.net/freebsd/grover-k7s5a.asl>

>

> *hellhound# sysctl hw.acpi*

> *hw.acpi.supported\_sleep\_state: S1 S4 S5*

> *hw.acpi.power\_button\_state: S5*

> *hw.acpi.sleep\_button\_state: S1*

> *hw.acpi.lid\_switch\_state: NONE*

> *hw.acpi.standby\_state: S1*

> *hw.acpi.suspend\_state: S3*

> *hw.acpi.sleep\_delay: 1*

> *hw.acpi.s4bios: 0*

> *hw.acpi.verbose: 0*

> *hw.acpi.disable\_on\_poweroff: 0*

> *hw.acpi.reset\_video: 1*

> *hw.acpi.cpu.cx\_supported: C1/0*

> *hw.acpi.cpu.cx\_lowest: C1*

> *hw.acpi.cpu.cx\_history: 7673/0*

Try to set `hw.acpi.disable_on_poweroff=1`.

Ronald.

--

Re: System boots with ACPI enabled now but hangs on reboot

freebsd-current: Re: System boots with ACPI enabled now but hangs on reboot

Using M2, Opera's revolutionary e-mail client: <http://www.opera.com/m2/>

---

freebsd-current@freebsd.org mailing list

<http://lists.freebsd.org/mailman/listinfo/freebsd-current>

To unsubscribe, send any mail to "freebsd-current-unsubscribe@freebsd.org"