

freebsd-current: Re: reboot hangs at Uptime:

## Re: reboot hangs at Uptime:

**Source:** <http://unix.derkeiler.com/Mailing-Lists/FreeBSD/current/2005-05/1003.html>

---

**From:** Sten Spans ([sten\\_at\\_blinkenlights.nl](mailto:sten_at_blinkenlights.nl))

**Date:** 05/29/05

Date: Sun, 29 May 2005 20:44:39 +0200 (CEST)  
To: Richard Tector <[richardtector@thekeelecentre.com](mailto:richardtector@thekeelecentre.com)>

On Sun, 29 May 2005, Richard Tector wrote:

> *Christoph P. Kukulies wrote:*  
>  
>> *I still have the problem that my machine cannot be rebooted remotely.*  
>>  
>> *Doing a reboot command or typing CTRL-ALT-DEL shuts down the machine*  
>> *but it then gives:*  
>>  
>> *umount of /dev failed (BUSY)*  
>> *Uptime: 2m2s*  
>>  
>> *and then nothing. The computer sits there. Motherboard is an ASROCK*  
>> *if that matters.*  
>  
> *I've had a similar problem for a while on a dual P3 Gateway branded Asus*  
> *CUR-DLS motherboard but never really looked into it much. At the time I tried*  
> *both with and without the ACPI module loaded; reboots are not possible. The*  
> *machine hangs just after printing something like cpu0: reset()*  
> *A basic shutdown -p now works fine and powers the machine off. Issuing*  
> *reboot/shutdown -r now however results in the above behaviour. The system has*  
> *tracked HEAD for a few months and the problem has existed as long as I can*  
> *remember.*  
>  
> *The machine is currently running the latest BIOS released by Gateway. I*  
> *didn't fancy trying the newer BIOS's from Asus. I've attached a copy of the*  
> *boot dmesg. If there's any other information that might be of help I can*  
> *supply that.*

Try turning on usb in the bios (even if you don't have usb in the kernel),  
this solved my reboot issues with supermicro serverworks p3 motherboards.

--

Sten Spans  
"There is a crack in everything, that's how the light gets in."  
Leonard Cohen - Anthem

---

freebsd-current@freebsd.org mailing list  
<http://lists.freebsd.org/mailman/listinfo/freebsd-current>

Re: reboot hangs at Uptime:

freebsd-current: Re: reboot hangs at Uptime:

To unsubscribe, send any mail to "freebsd-current-unsubscribe@freebsd.org"