

freebsd-questions: (no subject)

(no subject)

Source: <http://unix.derkeiler.com/Mailing-Lists/FreeBSD/questions/2004-01/0787.html>

merkurie_at_comcast.net

Date: 01/08/04

To: freebsd-questions@freebsd.org
Date: Thu, 08 Jan 2004 04:52:39 +0000

I have a Gigabyte GA-8KNXP Ultra motherboard with an Adaptec AIC-7902 controller built in. When booting an installation CD without the RAID function on, the controller shows up in dmesg and detects the 2 hard drives like normal. If I enable the Adaptec RAID function, nothing is detected. I get these messages instead:

```
pci3: <mass storage, RAID> at device 10.0 (no driver attached)
pci3: (mass storage, RAID) at device 10.1 (no driver attached)
```

Does FreeBSD just not support this device, or do I have to load some kind of module?
Thanks for your time.

Marc

freebsd-questions@freebsd.org mailing list
<http://lists.freebsd.org/mailman/listinfo/freebsd-questions>

To unsubscribe, send any mail to "freebsd-questions-unsubscribe@freebsd.org"