

cannot access LOM/Console

Source: <http://unix.derkeiler.com/Newsgroups/comp.unix.solaris/2005-02/1162.html>

From: sphen (sdfert123_at_yahoo.com)

Date: 02/13/05

Date: Sun, 13 Feb 2005 23:48:39 +0100

I've installed (sol.8 via JumpStart) two Fire 120, I was watching the installation at the console and all seemed to be OK. Upon the installation the servers have been switched off.

Now I tried to start them and :

1. the first one sends only bad characters to the console output, I can see that somewhat happens but cannot read anything. Poweron and -off work.
 2. the second one shows the output as usual but that's it, I cannot send anything. The LOM/Console seems to work in only one direction.
- My notebook with tterm, my cable I was using during the installation remain the same. Does somebody know what happens?